



OFFICINE GULLO
FIRENZE



BBS4E

BBS8E

ELECTRIC BARBECUE FOR
RESIDENTIAL AND PROFESSIONAL USE

INSTRUCTIONS
for installation and use

TABLE OF CONTENTS

WARNINGS & CAUTION.....	4
SAFETY INSTRUCTIONS	5
ELECTRICAL SCHEME	6
INSTALLATION'S INSTRUCTIONS	8
INSTRUCTIONS FOR USE	10
CLEANING AND CARE INSTRUCTIONS.....	10

WARNINGS & CAUTION

1. Before using the appliance, read the instruction manual carefully, as it contains important safety information on the proper installation, use and maintenance of the appliance. Please keep the instruction manual for further reference.
2. The appliance's electrical safety is guaranteed only if the electrical system is grounded in accordance with the relevant regulations. It is of the utmost importance to follow such regulations; when in doubt, please consult a qualified electrician to have the electrical system thoroughly checked. The manufacturer declines all responsibility for damage caused by a improperly grounded electrical system
3. Before connecting the appliance, make sure that the appliance's technical characteristics shown on the tag correspond to those of the electrical system supply.
4. Make sure that the electrical system and sockets can handle the appliance's maximum power consumption as shown on the tag. When in doubt, please consult a qualified electrician.
5. When not in use for extended periods, switch off the general power supply to the appliance.
6. Do not obstruct the appliance's cooling or heat dissipation vents.
7. The appliance must be used only for the purposes for which it has been expressly designed (cooking). All other uses (such as the heating of a room) are considered inappropriate and therefore dangerous. The manufacturer declines all responsibility for damage resulting from improper use of the appliance.
8. The use of any electric appliance implies the observance of some basic rules. More specifically:
 - Avoid the use of extension cords and, if necessary, take all precautions;
 - Do not pull the power cord to disconnect the plug from the power socket;
 - Do not allow children or untrained persons to use the appliance.
9. Before performing maintenance work, disconnect the appliance by pulling the plug out of the power socket or turning off the main switch.
10. In case of failure or malfunction, turn the appliance off and do not attempt to carry out any repairs, which must be done exclusively by an authorized service center.

SAFETY INSTRUCTIONS

Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

To avoid personal injury or property damage, please read and follow these important safety precautions.

1. Before any maintenance or repairs are performed, disconnect the appliance from the electric supply.
2. Your appliance should be installed by a qualified installation technician. Have the technician show you the exact location of the electric supply so you know how to turn off the appliance.
3. On positioning the appliance, ensure that it is perfectly levelled
4. Do not attempt to repair or replace any part of this appliance unless specifically instructed to do so by this manual. In-warranty service must be performed by an authorized service agency.
5. If the appliance is placed near a wall or partition, kitchen furniture or decorative coverings, etc., these must be fire-proof or coated with fire-proofing.
6. Children should not be left alone or unattended in the kitchen while the appliance is in use.
7. It is advisable to place the oven under an extractor hood to ensure rapid elimination of steam.
8. The ventilation and flue ways of this appliance must remain unobstructed at all times.
9. Do not store items of interest to children above the appliance. Children, as well as adults, should never be allowed to sit, stand, or climb on any part of the appliance. Serious injury may occur.
10. Never leave the appliance unattended during use.
11. For your safety, never use your appliance or any other cooking appliance as a space heater to warm or heat the room.
14. Use only dry potholders. Moist or damp potholders on hot surfaces may result in steam burns.
15. For a correct installation do not overlap induction elements.

ELECTRICAL SCHEME

The installation of this appliance must conform with all applicable local codes. In the absence of local codes, the installation must conform to the latest level of the National Electric Code, ANSI/NFPA 70.

If the electrical supply is not turned on or is interrupted the appliance will not operate. The applicable wiring diagram for this appliance is below. The circuit where you wire your appliance to must be grounded and polarized. We recommend the circuit for your appliance be a non-GCFI dedicated line.

BBS4E

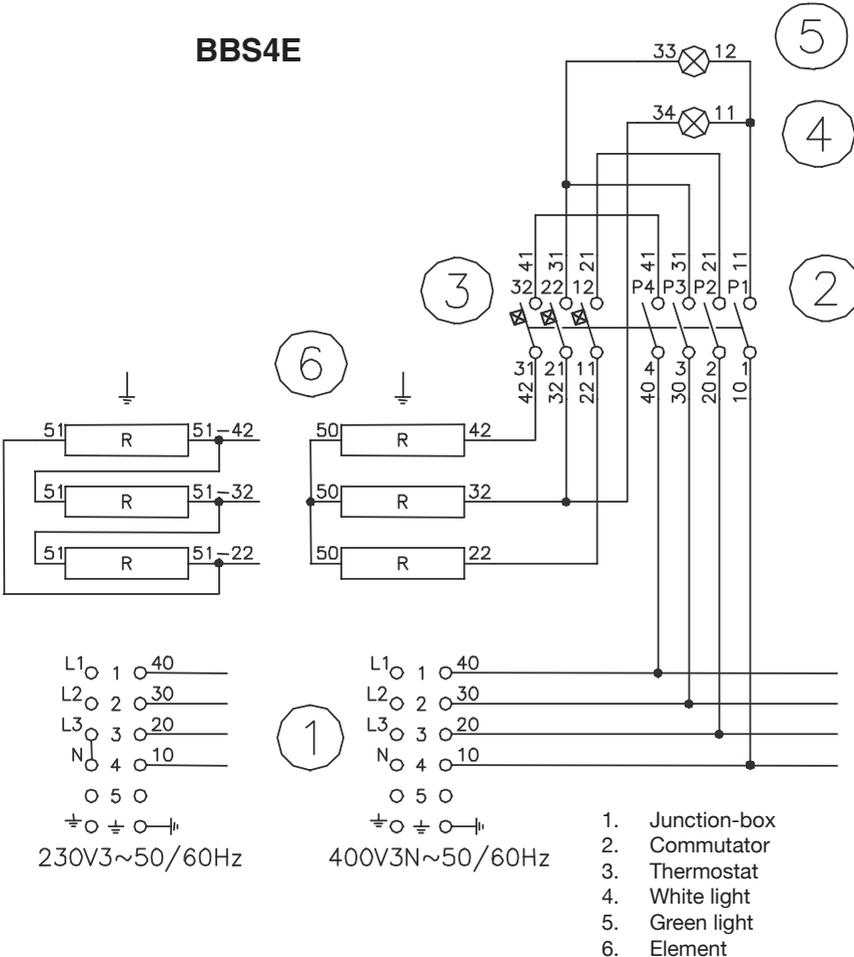


FIG.A

BBS8E

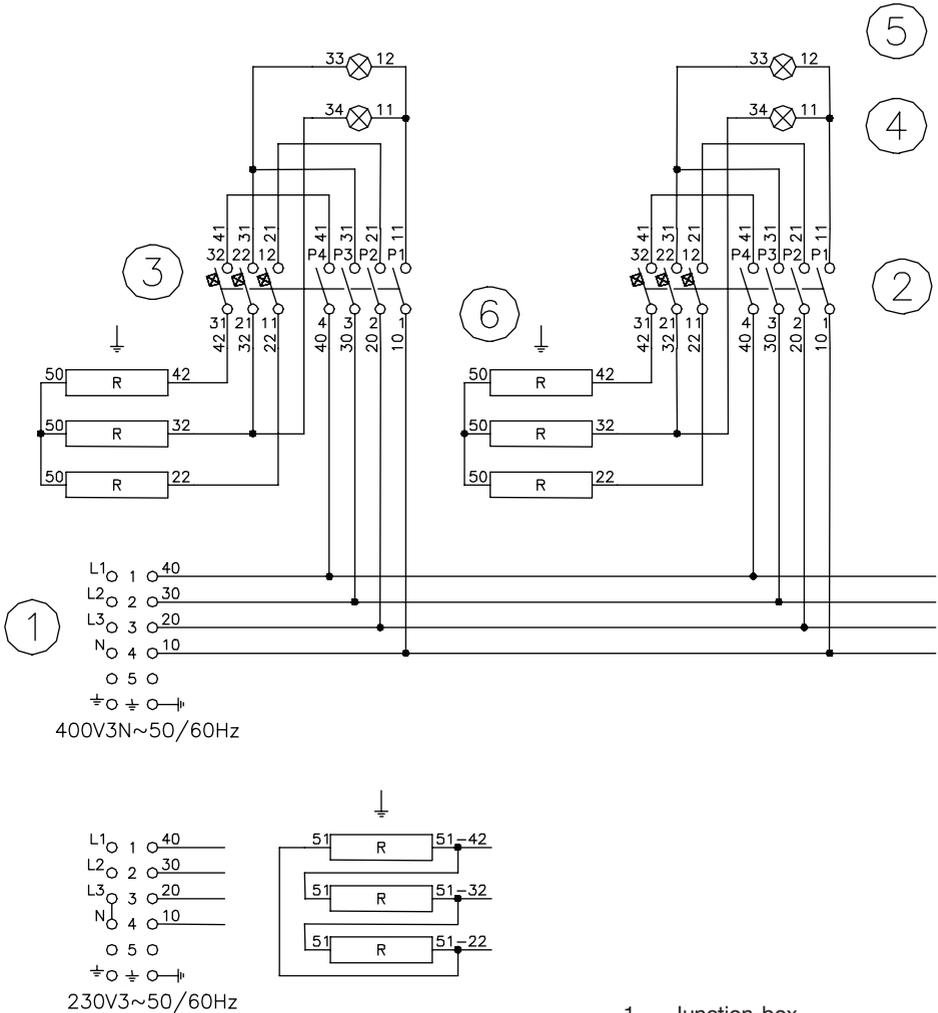


FIG.B

INSTALLATION'S INSTRUCTIONS

his appliance is Manufactured by OFFICINE GULLO S.r.l
Head office and factory



OFFICINE GULLO
F I R E N Z E

50012 Antella - Bagno a Ripoli (FI) Italy
via della Torricella, 29, - Tel. +39 055
6560324 - 621807
Fax +39 055 620670
In the US call (800)-781-7125
Home page [http:// www.officinegullousa.com](http://www.officinegullousa.com)

E-Mail: info@officinegullousa.com

The manufacturer declines any responsibility for direct or indirect damage caused by improper or incorrect installation, alterations, maintenance or use of the appliance, as in all the other cases considered in the items of our sales conditions.

BEFORE YOU BEGIN

The manufacturer declines all responsibility in the event of failure to observe the instructions given here for installation, maintenance and suitable operation of the product. The manufacturer further declines all responsibility for injury due to negligence and the warranty of the unit automatically expires due to improper maintenance and/or installation.

**BEFORE YOU BEGIN: Take the appliance out of its packaging.
Remove the protection film.**

It is advisable to test run the appliance before installation.

BEFORE STARTING please read this entire document and ensure you are fully conversant with the requirements and limitations.

ELECTRICAL INSTALLATION

The data plate is on the front panel (see diagram in electric connection item) and has all the data necessary for the connection.

When fitting, the appliance must be levelled using a spirit level; slight differences of level can be adjusted by screwing or unscrewing the adjustable feet. The main switch or the socket must be near the appliance and easily accessible.

It is advisable to place the appliance under an extractor hood so that steam is extracted rapidly. If the appliance is placed near walls, dividing panels, kitchen furniture, decorative finishings, etc., these should be in flameproof material; otherwise it is necessary to cover them with non-flammable material. Above all, it is necessary to ensure that the fire prevention norms are observed.

Attention! This appliance has been produced for use as part of a battery. If used singly, it will be necessary to keep it at least 10cm away from the adjacent walls.

All operations done when installing must be carried out observing the norms in force.

The manufacturer declines all responsibility in the event of incorrect functioning due to wrong installation or installation which does not comply with the norms.

Attention! the manufacturer cannot be held responsible for and does not cover in the guarantee any damage resulting from bad or faulty connections.

Attention! In accordance with international rules, when connecting the appliance, an automatic device enabling the disconnection of all contacts from the mains, must be installed above it; this device must have a contacts opening of at least 3 mm.

Electrical Supply.

This appliance requires electrical supply ensure an appropriately qualified person completes the electrical oven-up. The connection point for the electrical supply is at the top of the unit, therefore the electrical supply must be run down from the ceiling alongside the ductwork.

The appliance must be connected to an equipotential system.

The connection screw is positioned at the back of the appliance and is identified by the symbol  .

The appliance is supplied without the connection cable.

To install the power supply cable, proceed as follows:

- Disconnect the power supply.
- Remove the bottom panel
- Push the connection cable through the cable blocker, connect the conductor wires to the corresponding terminals in the junction box and fix them into place.
- Block the cable with the cable blocker, and reassemble the back panel. The earth wire must be longer than the others so that if the cable blocker should break, it will disconnect after the tension wires.

N.B. The connection cable must have the following characteristics: it must be at least the silicone type (resistant to a temperature of at least 180°C, and must have an adequate section for the power of the appliance (see technical data table).

TECHNICAL ELECTRICAL DATA TABLE

MODELS	Dimensions cm	Power supply	Power max kW	Absorb.max A	Power supply cable
BBS4E	40x70x29 h	230Vac (110+110) 50/60 Hz	6	26,09	3 x 4 mm ²
BBS8E	80x70x29 h	230Vac (110+110) 50/60 Hz	12	26,09 + 26,09	

INSTRUCTIONS FOR USE

Attention!

- Use the appliance only under surveillance.
- The drip pan may only be opened when the appliance is cold.

The grill can be used to cook meat, wüstel, sausages, fish, vegetables, etc.

TURNING ON

Check that the drip pan is inserted. Switch on the switch above the appliance. With model BBS8E, it is possible to use one half of the grill or to make the two halves work at different temperatures.

Turn the knob from "O" into the desired position between 50°C and 300°; The white and green lights come on.

The green light indicates the presence of electrical tension. The white light shows that the heating element is working; when the temperature is reached, it goes out.

To turn off the appliance, turn the knob into position "O".

STARTING UP

Before using the appliance for the first frying, it is necessary to clean it carefully, (see paragraph "cleaning and care").

Check the connection of the appliance and start it up following the instructions.

CLEANING AND CARE INSTRUCTIONS

Attention! During cleaning, do not wash the external parts of the appliance with direct sprays of water or with high pressure.

After every use, clean the appliance thoroughly. Daily cleaning after switching off the appliance ensures the perfect functioning and long life of the appliance.

Before starting to clean the appliance, disconnect the power supply. The parts in steel must be washed with hot water and neutral detergent, then rinsed thoroughly in order to eliminate all traces of detergent; after which, dried with a dry cloth. Do not use abrasive or corrosive detergents.

All residues of food must be removed from the grill with the proper spatula.

CLEANING BURNISHED BRASS SURFACES

No synthetic protective varnishes have been used to obtain the special burnishing effect on the burnished brass details in order to avoid spoiling the beauty of the brass with an artificial patina. The antique finish of the surface is the result of natural oxidation that has simply been accelerated. All the natural antique finish brass surfaces can be cleaned with any kitchen degreasing detergent, accompanied by the use of an abrasive scouring pad (the green colored type used for washing dishes). It is recommended that the metal be rubbed, uniformly applying light pressure, until the desired effect is achieved.

The brass details should then be dried.

Do not use polish as this is suitable for maintaining the gloss but not the antique finish and could result in an effect that is not compliant with our products. Any spots that may appear over time on the burnished brass surfaces should be considered as a desirable and particular characteristic of our craft metal working processes.

CLEANING CHROMIUM-PLATED BRASS SURFACES

No synthetic varnishes have been used to obtain the special polish on the chromium-plated brass details in order to avoid spoiling the beauty of the chromium plating with an artificial patina. All the chromium-plated surfaces should be cleaned, where necessary, with a soft, possibly micro-fiber cloth, combined with metal polishing products, if required. Do not use abrasive pads.

CLEANING SATIN FINISH NICKEL-PLATED BRASS SURFACES

No synthetic varnishes have been used to obtain the special nickel-plating on the satin finish nickel-plated brass details in order to avoid spoiling the beauty of the nickel-plated, satin finished solid brass with an artificial patina. All the nickel-plated and satin finished brass surfaces should be cleaned, where necessary, with a soft, possibly micro-fiber cloth, combined with a neutral detergent, if required. Do not use abrasive pads.

CLEANING THE VARNISHED SURFACES

All the varnished surfaces should be cleaned using a neutral detergent and, where necessary, a soft, possibly micro-fiber cloth. Do not use abrasive pads or any other chemical products.

CLEANING BRUSHED STEEL SURFACES

All the brushed steel surfaces should be cleaned using degreasing products or products specifically designed to be used on steel and, where necessary, extra-fine steel wool or extra-thin sandpaper.

PROCEDURE TO FOLLOW IF THE APPLIANCE IS NOT GOING TO BE USED FOR SOME TIME

Clean and dry the appliance carefully according to the instructions. Disconnect the power supply.

PROCEDURE TO FOLLOW IN THE EVENT OF A BREAKDOWN

In the event of breakdown, turn off the appliance, disconnect the power supply by using the device situated above the appliance and notify the after sales service.

MAINTENANCE (ONLY FOR QUALIFIED PERSONNEL)

Any kind of maintenance must only be done by qualified personnel. Before carrying out maintenance, remove the plug or switch off the switch above the appliance.

ACCESSIBILITY

To get to the junction-box, remove the back of the appliance. The control elements are reached from the front control panel; unscrew the fixing screws from the control panel and remove it.



US

V 1.0 - 9.17

OFFICINE GULLO S.R.L.: via della Torricella 29, 50012 Antella - Bagno a Ripoli (FI)

Tel. +39 055 6560324 / 621807 - Fax + 39 055 620670 - info@officinegullo.com

WWW.OFFICINEGULLO.COM