



OFFICINE GULLO  
FIRENZE



**ESV 144**

**WARMING DRAWER FOR  
RESIDENTIAL USE**

**INSTRUCTIONS**  
for installation and use



---

## Table of contents

---

<b>Important safety information</b>	<b>11</b>
<b>Environmental protection</b>	<b>12</b>
Environmentally-friendly disposal	12
<b>Getting to know the appliance</b>	<b>12</b>
Opening and closing	12
Special accessories	12
<b>Preheating ovenware</b>	<b>13</b>
General ovenware	13
Drinks containers	13
Method	13
<b>Keeping food warm</b>	<b>13</b>
Method	13
Switching off	13
<b>Uses</b>	<b>14</b>
Slow cooking	14
<b>Cleaning</b>	<b>15</b>
Appliance exterior	15
Heating plate	15
<b>Troubleshooting</b>	<b>16</b>
<b>After-sales service</b>	<b>16</b>
Technical data	16

Additional information on products, accessories, replacement parts and services can be found at [www.gaggenau.com](http://www.gaggenau.com) and in the online shop [www.gaggenau-eshop.com](http://www.gaggenau-eshop.com)

## Important safety information

Read these instructions carefully. Only then will you be able to operate your appliance safely and correctly. Retain the instruction manual and installation instructions for future use or for subsequent owners.

Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged in transport.

This appliance is intended for domestic use and the household environment only. The appliance should be used for keeping food warm and warming plates only.

This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capabilities or by persons with a lack of experience or knowledge if they are supervised or are instructed by a person responsible for their safety how to use the appliance safely and have understood the associated hazards.

Children must not play with the appliance. Children must not clean the appliance or carry out general maintenance unless they are at least 8 years old and are being supervised.

Keep children below the age of 8 years old at a safe distance from the appliance and power cable.

### **Risk of burns!**

- The heating plate in the warming drawer becomes very hot.  
Do not touch the heating plate when it is hot. Keep children at a safe distance.
- Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.

### **Risk of electric shock!**

- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Penetrating moisture may cause an electric shock. Do not use any high-pressure cleaners or steam cleaners.
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Cracks or fractures in the glass plate could cause electric shocks. Switch off the circuit breaker in the fuse box. Contact the after-sales service.
- Incorrect repairs are dangerous. Repairs may only be carried out by one of our trained after-sales engineers. If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Contact the after-sales service.

### **Risk of fire!**

The heating plate in the warming drawer becomes very hot and flammable materials may catch fire.

Do not store flammable objects or plastic containers in the warming drawer.

---

## Environmental protection

---

### Environmentally-friendly disposal

Dispose of packaging in an environmentally-friendly manner.




This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

---

## Getting to know the appliance

---

You can use the warming drawer to preheat ovenware or to keep food warm.

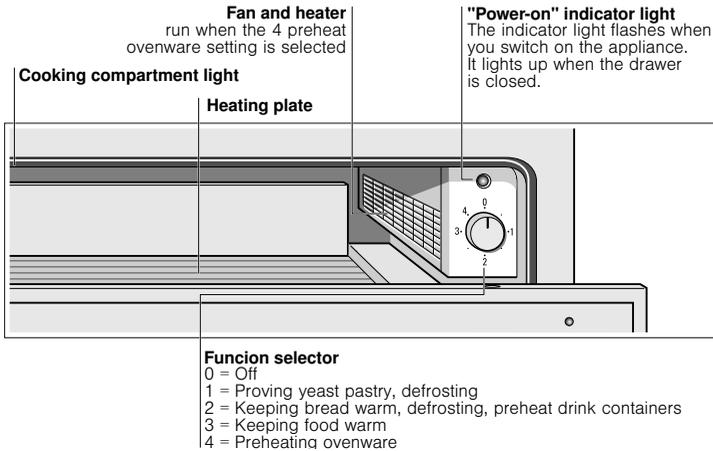

The appliance will only heat up if the drawer is closed correctly.

### Opening and closing

The appliance has a recess at the bottom which can be used as a handle to open and close it.

While opening and closing the illumination automatically turns on and off.

You can also turn off illumination completely by reaching into the appliance, using the slide switch on the upper left side.

### Special accessories

You can order the following special accessories from your specialist dealer:

Handle (60cm), aluminum	BA476530
Handle (60cm), stainless steel	BA476510
Handle 30" (76cm), stainless steel	BA478510

Only use the accessories as specified. The manufacturer accepts no liability if these accessories are used incorrectly.

---

## Preheating ovenware

---

Food stays warm for longer in preheated ovenware.  
Drinks also remain warm for longer.

## General ovenware

Only load the warming drawer up to 25 kg. You can preheat dinnerware for 6 or 12 people, for example.

Low drawer, (14 cm in height)	Tall drawer, (29 cm in height)		
6 dinner plates	Ø 24 cm	12 dinner plates	Ø 24 cm
6 soup bowls	Ø 10 cm	12 soup bowls	Ø 10 cm
1 serving dish	Ø 19 cm	1 serving dish	Ø 22 cm
1 serving dish	Ø 17 cm	1 serving dish	Ø 19 cm
1 meat plate	32 cm	1 serving dish	Ø 17 cm
		2 meat plates	32 cm

### Arranging ovenware

As far as possible, distribute the ovenware over the entire surface. It takes longer to warm through tall stacks of plates than individual pieces of ovenware, e.g. 2 serving dishes.

## Drinks containers

Always heat drinks containers, e.g. espresso cups, using setting 2.

### Risk of burning!

At setting 3 or 4, the drinks containers will get very hot.

## Method

- 1 Place the ovenware in the drawer.
- 2 Set the function selector to setting 4. Always heat drinks containers using setting 2.  
The "power on" indicator light flashes.
- 3 Close the warming drawer.  
The "power on" indicator light lights up. The appliance heats up.

### How long does preheating take

The length of time required for preheating depends on the material the ovenware is made of and its thickness, as well as the quantity, height and arrangement of the ovenware. As far as possible, distribute the ovenware over the entire surface.

It takes approximately 15-25 minutes to preheat dinnerware for 6 people.

### Switching off

Open the drawer. Switch off the function selector.

### Removing ovenware

Remove ovenware from the drawer using oven gloves or an oven cloth.

### Risk of burning!

The upper surface of the heating plate will be hot. The base of the ovenware will be hotter than the top.

---

## Keeping food warm

---

Do not place hot saucepans or pans on the glass surface of the warming drawer immediately after removing them from the hot hob. This could damage the glass surface.

Do not fill the ovenware to such an extent that food spills over.

Cover the food with a heat-resistant lid or aluminium foil.

It is recommended that you do not keep food warm for longer than an hour.

**Suitable foods:** The appliance is suitable for keeping meat, poultry, fish, sauces, vegetables, side dishes and soups warm.

## Method

- 1 Place the ovenware in the drawer.
- 2 Set the function selector to setting 3 and preheat the appliance for 10 minutes.
- 3 Add the food to the preheated ovenware.
- 4 Close the drawer again.  
The "power on" indicator light lights up. The appliance heats up.

## Switching off

Switch off the function selector. Remove the food from the drawer using oven gloves or an oven cloth.

---

## Uses

---

The table shows various uses for the warming drawer. Set the function selector to the desired setting. Preheat the ovenware as indicated in the table.

Level	Food / ovenware	Note
1	Delicate deep-frozen food e.g. cream cakes, butter, sausages, cheese	Defrost
1	Leaving yeast dough to rise	Cover
2	Deep-frozen food e.g. meat, cakes, bread	Defrost
2	Keeping eggs warm e.g. hard-boiled eggs, scrambled eggs	Preheat ovenware, cover food
2	Keeping bread warm e.g. toast, bread rolls	Preheat ovenware, cover food
2	Preheating drinks containers	e.g. espresso cups
2	Delicate food e.g. slow-cooked meat	Cover ovenware
3	Keeping food warm	Preheat ovenware, cover food
3	Keeping drinks warm	Preheat ovenware, cover drinks
3	Warming flat dough-based foods e.g. pancakes, wraps, tacos	Preheat ovenware, cover food
3	Warming dry cakes e.g. crumble cakes, muffins	Preheat ovenware, cover food
3	Melting cooking chocolate or chocolate coating	Preheat ovenware, break up food into small pieces
3	Dissolving gelatine	Open, approximately 20 minutes
4	Preheating ovenware	Not suitable for drinks containers

## Slow cooking

Slow cooking is the ideal cooking method for all tender pieces of meat which are to be cooked rare or very rare. The meat remains very juicy and turns out as soft as butter. Advantage: this gives you flexibility when planning meals, since the cooking times for slow cooking are generally longer. Slow-cooked meat can be kept warm easily.

**Suitable ovenware:** Use ovenware made out of glass, porcelain or ceramic and with a lid, e.g. a glass roasting dish.

### Method

- 1 Preheat the warming drawer containing the ovenware at setting 4.
- 2 Rapidly heat a little fat in a pan. Sear the meat over a high heat and then place it directly in the warmed ovenware. Place the lid on top.
- 3 Put the ovenware with the meat back in the warming drawer and complete the cooking. Set the function selector to setting 3.

### Notes on slow cooking

Only use high-quality, fresh meat for this. Carefully remove sinews and fat. Fat develops a strong, distinct taste during slow cooking.

The meat should not be turned even if it is a large joint.

You can cut the meat immediately after slow cooking. It is not necessary to leave the meat to stand.

This particular cooking method always leaves the inside of the meat medium rare. However, this does not mean that it is raw or not properly cooked.

Meat that has been slow-cooked is not as hot as meat that has been cooked conventionally. Serve the sauce very hot. Place the plates in the warming drawer for the last 20-30 minutes.

Turn the oven back to setting 2 after slow cooking in order to keep the slow-cooked meat warm. You can keep small pieces of meat warm for up to 45 minutes, and large pieces for up to two hours.

## Table

All tender joints of beef, pork, veal, lamb, game and poultry are suitable for slow cooking. Searing and braising times depend on the size of the piece of meat. The times for searing refer to the meat being placed in hot fat.

Meal	Searing on the hotplate	Completing in the oven
<b>Small pieces of meat</b>		
Cubes or strips	1-2 minutes all over	20-30 minutes
Small cutlets, steaks or médaillons	1-2 minutes per side	35-50 minutes
<b>Medium-sized pieces of meat</b>		
Fillet (400-800g)	4-5 minutes all over	75-120 minutes
Saddle of lamb (approx. 450g)	2-3 minutes per side	50-60 minutes
Lean joint (600-1000g)	10-15 minutes all over	120-180 minutes
<b>Large pieces of meat</b>		
Fillet (from 900g)	6-8 minutes all over	120-180 minutes
Roast beef (1,1-2kg)	8-10 minutes all over	210-300 minutes

---

## Cleaning

---

Do not use high-pressure cleaners or steam jets. Only clean the drawer when the appliance is switched off. Function selector Setting = 0.

### Appliance exterior

Wipe the appliance with water and a little detergent. Then dry it with a soft cloth.

Caustic or abrasive cleaning products are not suitable. If a caustic or abrasive substance comes into contact with the frontage, wash it off immediately with water.

### Stainless steel surfaces

Always remove any flecks of limescale, grease, cornflour and egg white immediately. Corrosion can form under such flecks. Clean the appliance using water and a little detergent. Then dry the surface with a soft cloth.

### Appliances with glass fronts

Clean the glass front with glass cleaner and a soft cloth. Do not use a glass scraper.

### Heating plate

Clean the heating plate using warm water and a little detergent.

---

## Troubleshooting

---

Malfunctions often have simple explanations. Please read the following instructions before calling the after-sales service:

<b>The ovenware or food remain cold.</b>	Check whether: <ul style="list-style-type: none"><li>● the appliance is switched on</li><li>● there has been a power cut</li><li>● the drawer is closed completely</li></ul>
<b>The ovenware or food are not warmed sufficiently.</b>	This may indicate that: <ul style="list-style-type: none"><li>● the ovenware or food were not warmed for a sufficient length of time</li><li>● the drawer was left open for a long time</li></ul>
<b>The "power on" indicator light flashes.</b>	Check whether the drawer is closed.
<b>The indicator light flashes rapidly when the warming drawer is closed.</b>	Call the after-sales service.
<b>The "power on" indicator light does not light up.</b>	The indicator light is faulty. Consult the after-sales service
<b>The fuse in the fuse box has blown.</b>	Disconnect the appliance at the mains and consult the after-sales service.

Repairs must only be carried out by qualified specialists. Incorrect repairs may result in serious injury to the user.

---

## After-sales service

---

Our after-sales service is there for you if your oven should need to be repaired. You will find the address and telephone number of your nearest after-sales service centre in the phone book. The after-sales service centres listed will also be happy to advise you of a service point in your local area.

**E number and FD number** When contacting the after-sales service, always specify the product number (E no.) and the production number (FD no.) of your appliance. The rating plate bearing these numbers can be found by opening the warming drawer. Make a note of these numbers in the space below to save time in the event of your appliance malfunctioning.

---

E no.	FD no.
-------	--------

---

After-sales service 

---

Please find the contact data of all countries in the enclosed customer service list.

### To book an engineer visit and product advice

<b>GB</b>	0844 89289988 Calls from a BT landline will be charged at up to 3 pence per minute. A call set-up fee of up to 6 pence may apply.
<b>IE</b>	01450 2655
<b>AU</b>	1300 727 421
<b>NZ</b>	09 477 0492

Trust the expertise of the manufacturer, and rest assured that the repair will be carried out by trained service technicians using original spare parts for your domestic appliance.

### Technical data

Power supply:	220-240 V 50/60 Hz
Total connected load:	810 W
VDE-inspected:	yes
CE mark:	yes







en

INTERNATIONAL

V 1.1 - 7.17

OFFICINE GULLO S.R.L.: via della Torricella 29, 50012 Antella - Bagno a Ripoli (FI)

Tel. +39 055 6560324 / 621807 - Fax + 39 055 620670 - info@officinegullo.com

[WWW.OFFICINEGULLO.COM](http://WWW.OFFICINEGULLO.COM)